



TA 7040

Håltagningsmått för ovanliggande montage och planmontage


Asennusaukon mittakuva upotukselle sekä huullosasennukselle

Plass størrelse for ovenfor montering og flat montering

Hole measurements for top and flush mount

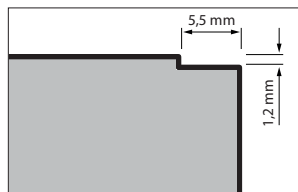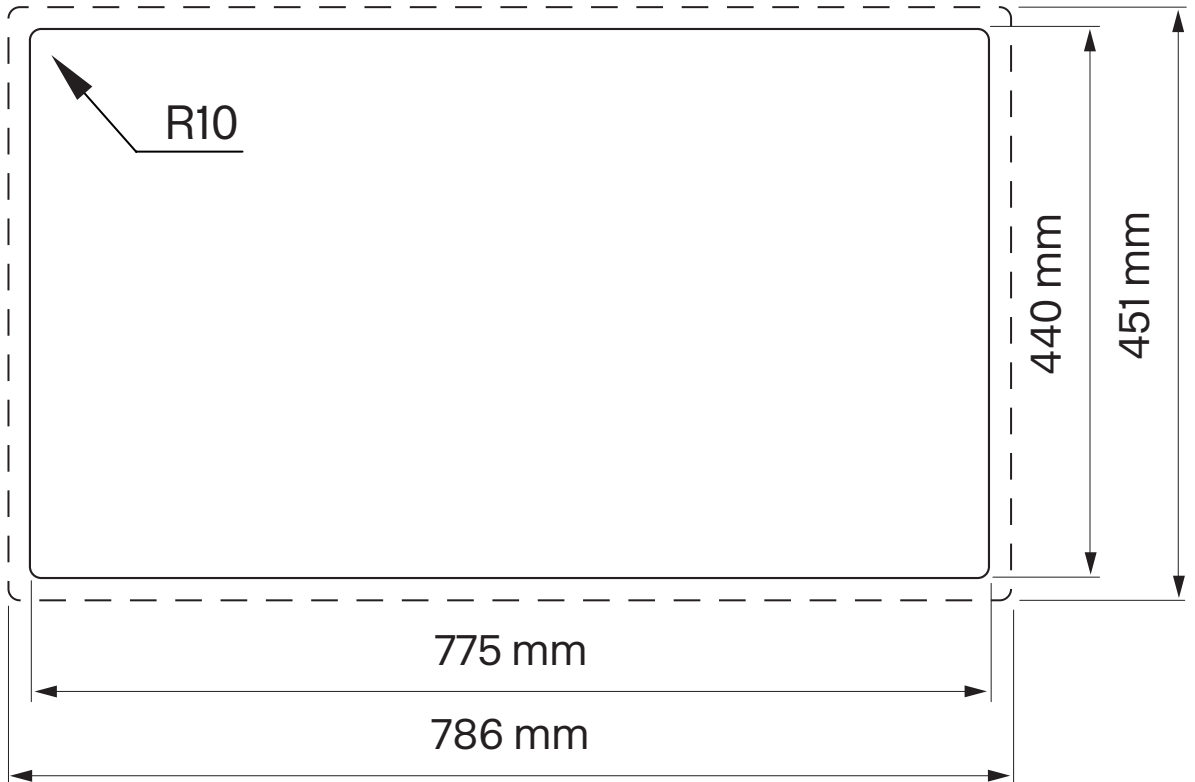

- Håltagning bänkskiva ovanliggande montage/planmontage
Prege benk øvre monterings/plan montering
Asennusaukko upotukseeseen
Countertop cut out for top mount/flush mount
- - - - - Urfräsning vid planmontage (5,5 mm bred, 1,2 mm djup)
Utgravingen av festeplanet (5,5 mm brede, 1,2 mm dype)
Huullosasennuksen tason jyrästä (5.5mm leveä, 1.2mm syvä)
Recess for flush mount (5.5 mm wide, 1.2 mm deep)

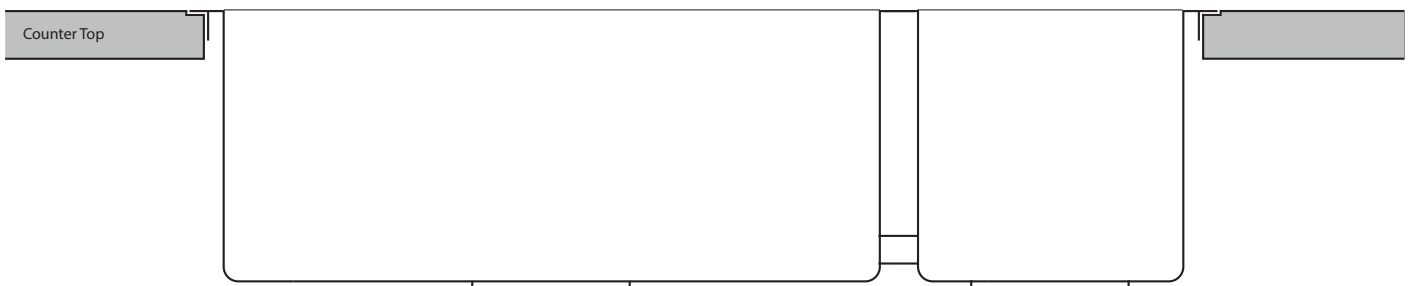

TA 7040

Håltagningsmått för
undermontage (underlimning)

Asennusaukon mittakuva
alta-asennukselle (altaliimaus)

Plass størrelsen av
sammenstillingen (ved liming)

Hole measurements
for under mount

